

Online UPS

EN



PowerWalker VFI 10000CP 3/3

PowerWalker VFI 15000CP 3/3

PowerWalker VFI 20000CP 3/3

PowerWalker VFI 30000CP 3/3

Bedienungsanleitung

Unterbrechungsfreie Stromversorgung

INHALTSVERZEICHNIS

1. SAFETY AND EMC INSTRUCTIONS	1
1-1. TRANSPORTATION AND STORAGE	1
1-2. PREPARATION	ERROR! BOOKMARK NOT DEFINED.
1-3. INSTALLATION	ERROR! BOOKMARK NOT DEFINED.
1-4. OPERATION	ERROR! BOOKMARK NOT DEFINED.
1-5. STANDARDS	2
2. INSTALLATION AND OPERATION	3
2-1. UNPACKING AND INSPECTION	3
2-2. REAR PANEL VIEW	4
2-3. SINGLE UPS INSTALLATION	5
2-4. UPS INSTALLATION FOR PARALLEL SYSTEM	8
2-5. SOFTWARE INSTALLATION	9
3. OPERATIONS	10
3-1. BUTTON OPERATION	10
3-2. LED INDICATORS AND LCD PANEL	11
3-3. AUDIBLE ALARM	ERROR! BOOKMARK NOT DEFINED.
3-4. SINGLE UPS OPERATION	13
3-5. PARALLEL OPERATION	16
3-6. ABBREVIATION MEANING IN LCD DISPLAY	17
3-7. LCD SETTING	18
3-8. OPERATING MODE/STATUS DESCRIPTION	25
3-9. FAULT CODE	31
3-10. WARNING INDICATOR	31
3-11. WARNING CODE	32
4. TROUBLE SHOOTING	32
5. STORAGE AND MAINTENANCE	34
5-1. STORAGE	34
5-2. MAINTENANCE	34
6. SPECIFICATIONS	35

1. Wichtige Sicherheitshinweise

Bitte beachten Sie strikt alle Warnhinweise und Bedienungsanleitungen in diesem Handbuch. Verwahren Sie diese Anleitung gut auf und lesen sorgfältig die folgenden Anweisungen, bevor Sie das Gerät installieren. Nehmen Sie das Gerät nicht vor dem Lesen aller Sicherheitsinformation und Betriebsanleitungen in Betrieb.

1-1. Transport

- Bitte transportieren Sie die USV nur in der Originalverpackung, um es vor Stößen zu schützen.
- **The UPS must be stored in the room where it is ventilated and dry.**

1-2. Vorbereitung

- In der USV kann es zur Bildung von Kondenswasser kommen, wenn diese von einer warmen direkt einer kalten Umgebung ausgesetzt wird. Die USV muss absolut trocken sein, bevor sie installiert wird. Lassen Sie der USV mindestens zwei Stunden Zeit sich zu akklimatisieren.
- Installieren Sie die USV nicht neben offenem Wasser oder in einer feuchten Umgebung.
- Installieren Sie die USV nicht neben einer Heizung oder an einem Ort, wo es direktem Sonnenlicht ausgesetzt ist.
- Halten Sie die Ventilationsöffnungen des USV-Gehäuses frei.

1-3. Installation

- Schließen Sie keine Geräte an die USV an, die diese überlasten könnten.
- Verlegen Sie die Kabel so, dass niemand darüber stolpern kann.
- **Do not block air vents in the housing of UPS. The UPS must be installed in a location with good ventilation. Ensure enough space on each side for ventilation.**
- **UPS has provided earthed terminal, in the final installed system configuration, equipotential earth bonding to the external UPS battery cabinets.**
- **The UPS can be installed only by qualified maintenance personnel.**
- **An appropriate disconnect device as short-circuit backup protection should be provided in the building wiring installation.**
- **An integral single emergency switching device which prevents further supply to the load by the UPS in any mode of operation should be provided in the building wiring installation.**
- **Connect the earth before connecting to the building wiring terminal.**
- **Installation and Wiring must be performed in accordance with the local electrical laws and regulations.**

1-4. Betrieb

- Ziehen Sie das Stromkabel der USV während des Betriebs nicht aus der Ausgang und

unterbrechen Sie nicht die Verbindung des Stromkabels mit der USV, da dies die Erdung aller angeschlossener Geräte inklusive der USV unterbricht.

- Die USV hat seine eigene interne Stromquelle (Akkus). Die Ausgänge der USV können unter Strom stehen, auch wenn die USV nicht an einer Steckdose eingesteckt ist.
- Um die USV komplett vom Netz zu nehmen, drücken Sie bitte zuerst die OFF/Enter-Taste, bevor Sie das Stromkabel ausstecken.
- Verhindern Sie das Eindringen von Flüssigkeit oder fremder Objekte in die USV.
- Die USV kann von jedermann ohne Erfahrung betreiben werden.

EN

1-5. Standard

* Safety	
IEC/EN 62040-1	
* EMI	
Conducted Emission.....:IEC/EN 62040-2	Category C3
Radiated Emission.....:IEC/EN 62040-2	Category C3
* EMS	
ESD.....:IEC/EN 61000-4-2	Level 4
RS..... :IEC/EN 61000-4-3	Level 3
EFT..... :IEC/EN 61000-4-4	Level 4
SURGE..... :IEC/EN 61000-4-5	Level 4
CS..... :IEC/EN 61000-4-6	Level 3
Power-frequency Magnetic field..... :IEC/EN 61000-4-8	Level 4
Low Frequency Signals.....:IEC/EN 61000-2-2	
Warning: This is a product for commercial and industrial application in the second environment-installation restrictions or additional measures may be needed to prevent disturbances.	

2. Installation und Aufbau

Es gibt zwei unterschiedliche Arten von Online-USV: Standard and Long-run Modelle. Bitte beachten Sie folgende Modellübersicht.

Model	Type	Model	Type
10000	Standard model	10000L	Long-run model
15000		15000L	
20000		20000L	
30000		30000L	

We also offer optional parallel function for these two types by request. The UPS with parallel function is called as "Parallel model". We have described detailed installation and operation of Parallel Model in the following chapter.

2-1. Unpacking and Inspection

Unpack the package and check the package contents. The shipping package contains:

- One UPS
- One user manual
- One monitoring software CD
- One RS-232 cable (option)
- One USB cable
- One parallel cable (only available for parallel model)
- One share current cable (only available for parallel model)

NOTE: Before installation, please inspect the unit. Be sure that nothing inside the package is damaged during transportation. Do not turn on the unit and notify the carrier and dealer immediately if there is any damage or lacking of some parts. Please keep the original package in a safe place for future use.

2-2. Hintere Konsolenansicht

EN

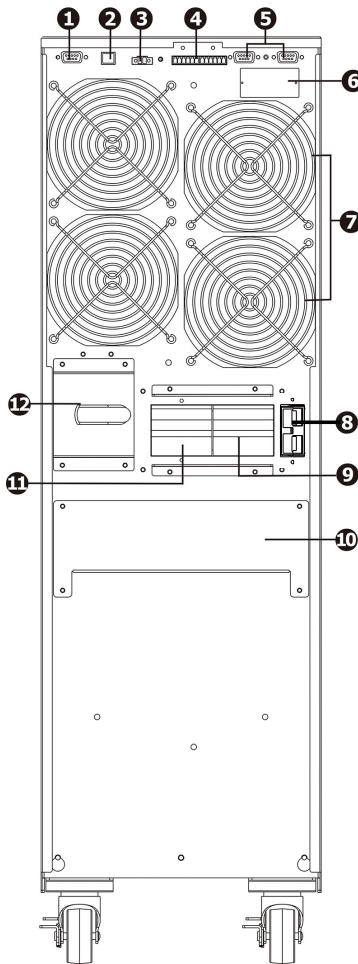


Diagramm 1: 10000(L)/15000(L)
/20000 (L)

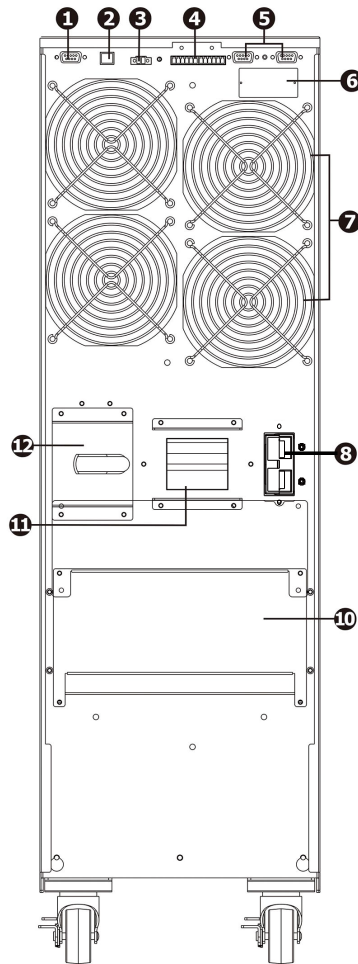


Diagramm 2: 30000L

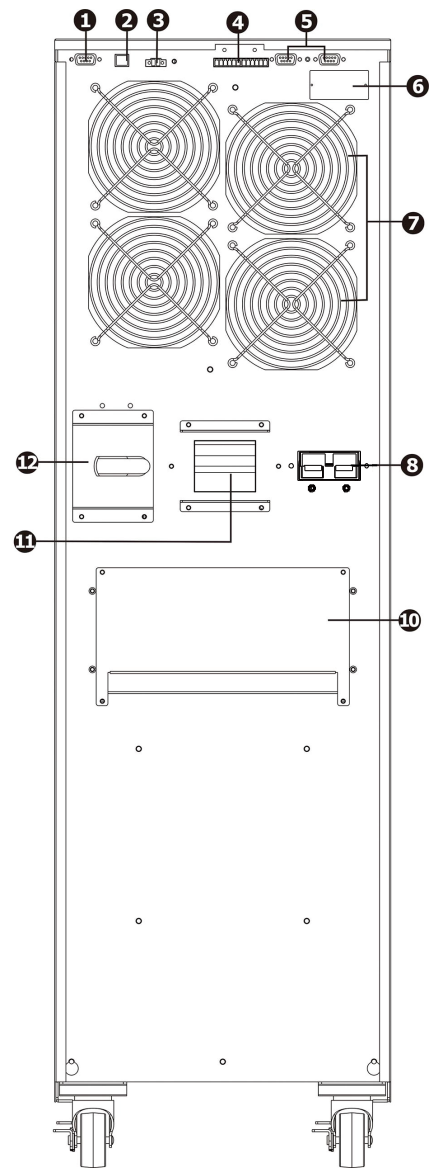


Diagramm 3: 30000

Rear Panel

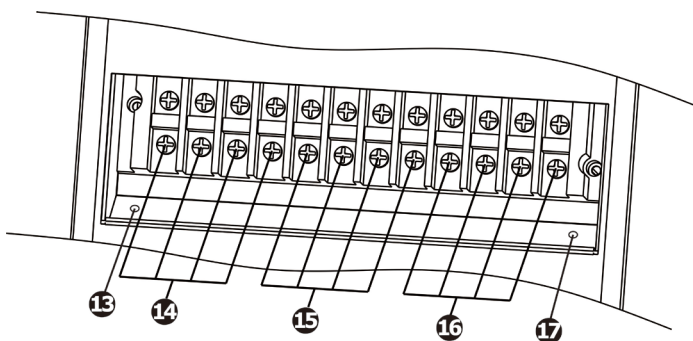


Diagramm 3: 10000(L)15000(L)/20000(L)
Input/Output Terminal

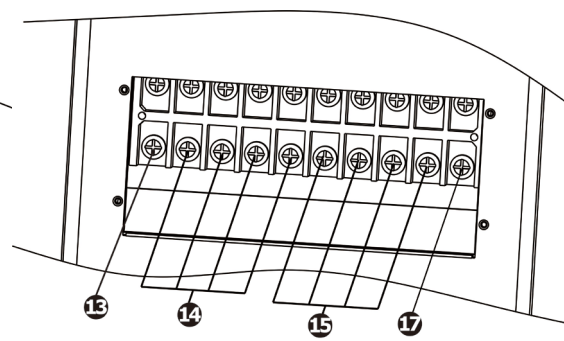


Diagramm 4: 30000(L)
Input/Output Terminal

1. RS-232 Port
2. USB Port
3. Stecker für Not-Aus-Schalter (Emergency power off - EPO).
4. Share current port (only available for parallel model)
5. Parallel port (only available for parallel model)
6. Intelligent slot
7. Power stage fan
8. Externer Akkuanschluss
9. Bypass Input Circuit Breaker(Only available for dual input unit)
10. Eingang/Ausgang terminal (Diagramm 2)
11. Eingangsicherung
12. Maintenance bypass switch
13. Output Grounding terminal
14. Output terminal: connect to mission-critical loads
15. Line input terminal
16. Bypass input terminal(Only available for dual input)
17. Input Grounding terminal

2-3. Single UPS Installation

Installation and wiring must be performed in accordance with the local electric laws/regulations and execute the following instructions by professional personnel.

1) Make sure the mains wire and breakers in the building are enough for the rated capacity of UPS to avoid the hazards of electric shock or fire.

NOTE: Do not use the wall receptacle as the input power source for the UPS, as its rated current is less than the UPS's maximum input current. Otherwise the receptacle may be burned and destroyed.

2) Switch off the mains switch in the building before installation.

3) Turn off all the connected devices before connecting to the UPS.

4) Prepare wires based on the following table:

Model	Wiring spec (AWG)				
	Input(Ph)	Output(Ph)	Neutral	Battery	Ground
10000	10	10	8	/	8
10000L	10	10	8	8	8
15000	8	8	6	/	6
15000L	8	8	6	6	6
20000	8	8	6	/	6
20000L	8	8	6	6	6
30000	8	8	4	/	4
30000L	8	8	4	4	4

NOTE 1: The cable for 10000/10000L should be able to withstand over 40A current. It is recommended to use AWG 10 or thicker wire for Phase and AWG 8 or thicker wire for Neutral for safety and efficiency.


NOTE 2: The cable for 15000/15000L should be able to withstand over 63A current. It is recommended to use AWG 8 or thicker wire for Phase and AWG 6 or thicker wire for Neutral for safety and efficiency.

NOTE 3: The cable for 20000/20000L should be able to withstand over 63A current. It is recommended to use AWG 8 or thicker wire for Phase and AWG 6 or thicker wire for Neutral for safety and efficiency.


NOTE 4: The cable for 30000/30000L should be able to withstand over 63A current. It is recommended to use AWG 8 or thicker wire for Phase and AWG 4 or thicker wire for Neutral for safety and efficiency.

NOTE 5: The selections for color of wires should be followed by the local electrical laws and regulations.

5) Remove the terminal block cover on the rear panel of UPS. Then connect the wires according to the following terminal block diagrams: (Connect the earth wire first when making wire connection. Disconnect the earth wire last when making wire disconnection!)

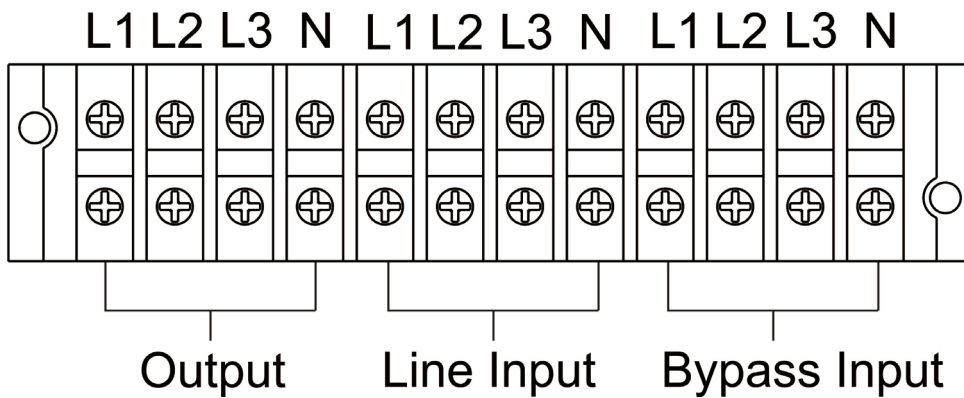

Terminal Block wiring diagram of 10000(L)/15000(L)/20000(L)

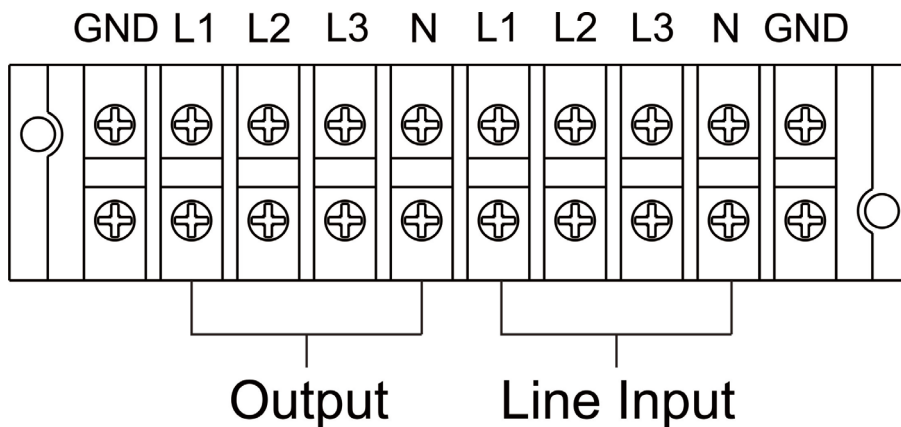

Terminal Block wiring diagram of 30000(L)

For dual input unit, if there is two separate input, connect the Line input and bypass input respectively; if the is only one common input, please connect the line input and bypass input together.

NOTE 1: Make sure that the wires are connected tightly with the terminals.

NOTE 2: Please install the output breaker between the output terminal and the load, and the breaker should be qualified with leakage current protective function if necessary.

6) Put the terminal block cover back to the rear panel of the UPS.



Warning: (Only for standard model)

- Make sure the UPS is not turned on before installation. The UPS should not be turned on during wiring connection.
- Do not try to modify the standard model to the long-run model. Particularly, do not try to connect the standard internal battery to the external battery. The battery type and voltage may be different. If you connect them together, it maybe causes the hazard of electric shock or fire!



Warning: (Only for long-run model)

- Make sure a DC breaker or other protection device between UPS and external battery pack is installed. If not, please install it carefully. Switch off the battery breaker before installation.

NOTE: Set the battery pack breaker in "OFF" position and then install the battery pack.

- Pay highly attention to the rated battery voltage marked on the rear panel. If you want to change the numbers of the battery pack, please make sure you modify the setting simultaneously. The connection with wrong battery voltage may cause permanent damage of the UPS. Make sure the voltage of the battery pack is correct.
- Pay highly attention to the polarity marking on external battery terminal block, and make sure the correct battery polarity is connected. Wrong connection may cause permanent damage of the UPS.
- Make sure the protective earth ground wiring is correct. The wire current spec, color, position, connection and conductance reliability should be checked carefully.
- Make sure the utility input & output wiring is correct. The wire current spec, color, position, connection and conductance reliability should be checked carefully. Make sure the L/N site is correct, not reverse and short-circuited.


2-4. UPS Installation for Parallel System

If the UPS is only available for single operation, you may skip this section to the next.


- 1) Install and wires the UPSs according to the section 2-3.
- 2) Connect the output wires of each UPS to an output breaker.
- 3) Connect all output breakers to a major output breaker. Then this major output breaker will directly connect to the loads.
- 4) Each UPS is connected to an independent battery pack.

NOTE: The parallel system can not use one battery pack. Otherwise, it will cause system permanent failure.

- 5) Refer to the following wiring diagram:

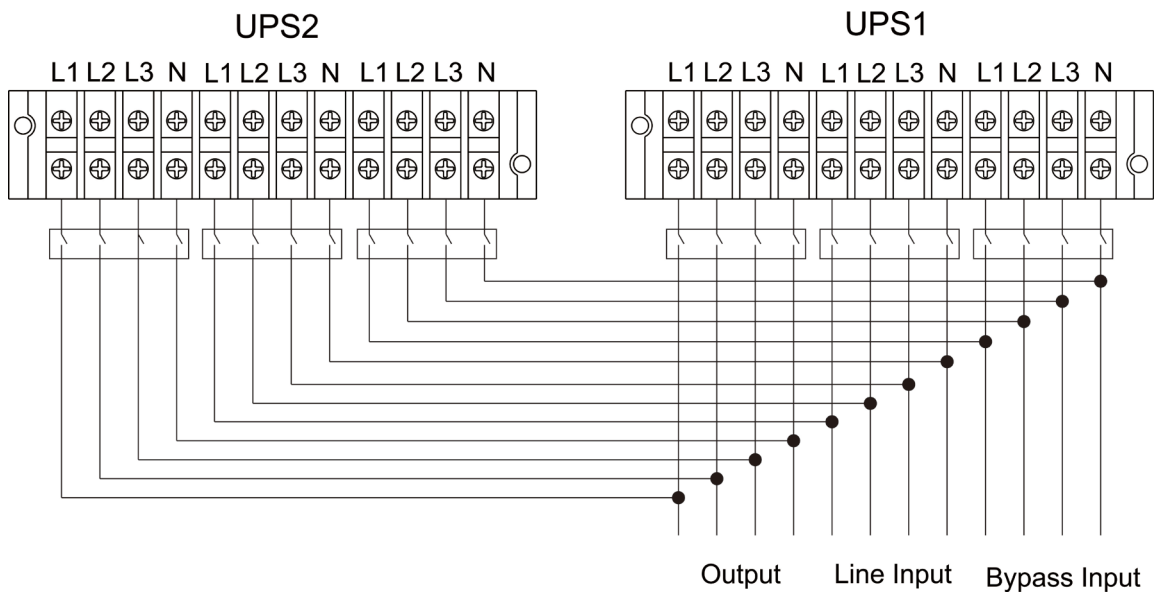

Wiring diagram of parallel system for 10000(L)/15000(L)/20000(L)

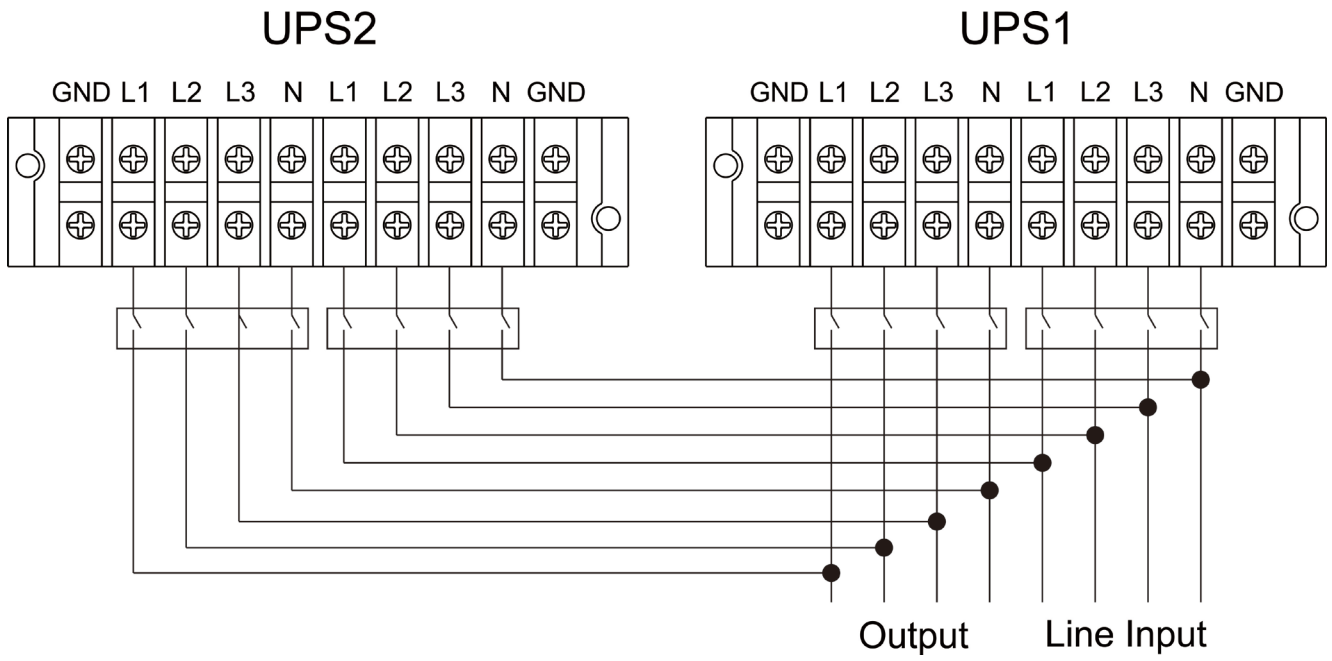

Wiring diagram of parallel system for 30000(L)

2-5. Software Installation


For optimal computer system protection, install UPS monitoring software to fully configure UPS shutdown.

3. Betrieb

3-1. Tastenbedienung

Button	Function
ON/Enter Taste	<ul style="list-style-type: none"> ➤ Anschalten der USV: Drücken und halten Sie die ON/Mute Taste für mindesten 0,5 Sekunden, um die USV einzuschalten. ➤ Auswahlbestätigen-Taste: Drücken Sie diese Taste. um die Auswahl in den USV Einstellungen zu bestätigen.
OFF/ESC Taste	<ul style="list-style-type: none"> ➤ USV ausschalten: Drücken und halten Sie diese Taste für mindesten 0,5 Sekunden, um den Akkubetrieb der USV auszuschalten. ➤ Drücken Sie diese Taste um die vorangegangene Auswahloptionen in den USV Einstellungen aufzurufen
Test/Oben Taste	<ul style="list-style-type: none"> ➤ Akkutest: Drücken Sie die Test-Tasten gleichzeitig für 0,5 Sekunden um den Selbsttest aufzurufen, wähen sich die USV im Netzbetrieb oder Konverter-Modus befindet. ➤ Drücken Sie diese Taste um die nächste Auswahl in den USV Einstellungen anzuzeigen.
Mute/Unten Taste	<ul style="list-style-type: none"> ➤ Stummschaltung des Alarms: Sobald die USV im Akkubetrieb ist, drücken und halten Sie diese Taste für mindesten 0,5 Sekunde um den Alarm an oder auszuschalten. Diese Taste beeinflusst nicht den Alarm für andere Warnungen oder Fehlermeldungen. ➤ Drücken Sie diese Taste um die letzte Auswahl in den USV Einstellungen anzuzeigen.
Test/open + Mute/unten Taste	<ul style="list-style-type: none"> ➤ Press and hold the two buttons simultaneous more than 1s to enter/escape the setting menu.

3-2. LCD Panel

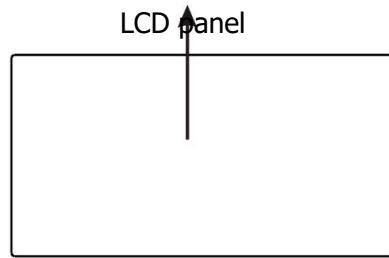


LED Indicators:

There are 4 LEDs on front panel to show the UPS working status:

Modus \ LED	Bypass	Line	Akkus	Fehler
UPS An	●	●	●	●
Keine Ausgang Modus	○	○	○	○
Bypassmodus	●	○	○	○
AC Modus	○	●	○	○
Akkumodus	○	○	●	○
Konverter-Modus	○	●	○	○
Akku-Test	●	●	●	○
ECO Modus	●	●	○	○
Fehler	○	○	○	●



Note: ● means LED is lighting, and ○ means LED is faded.

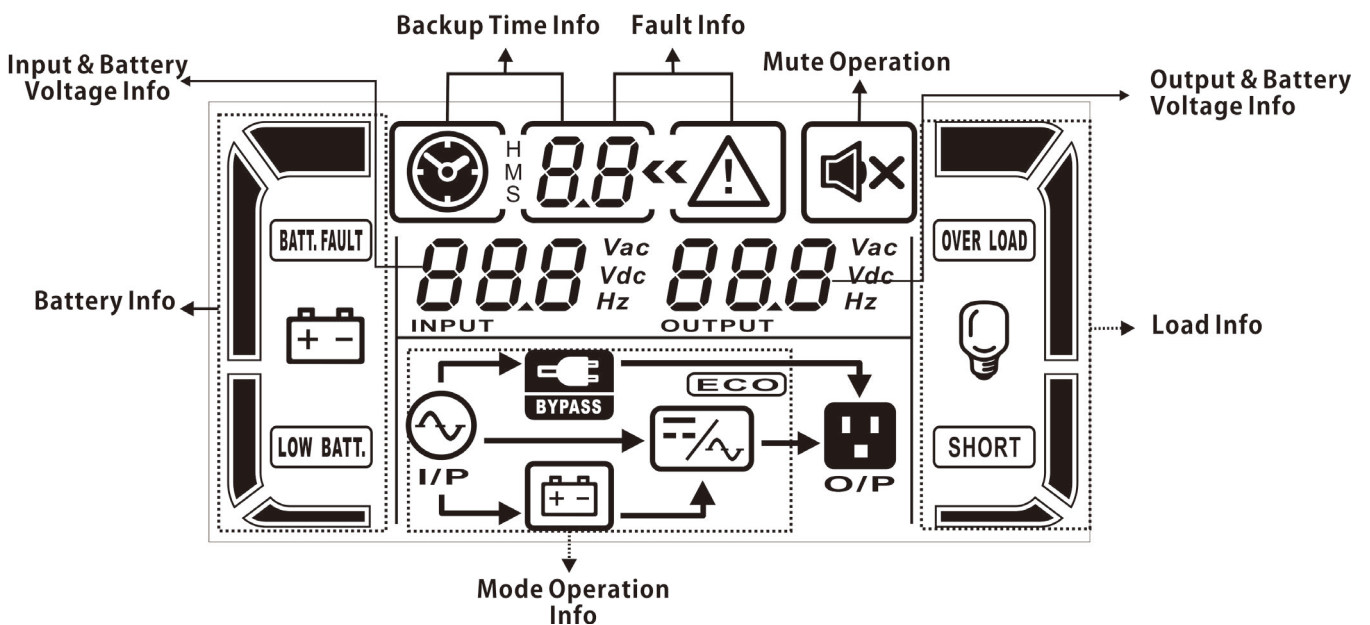LCD Panel:



Anzeige	Funktion
Laufzeit	
	Zeigt die verbleibende Überbrückungszeit als Wert. H: Stunde, M: Minute, S: Sekunde
Fehlermeldung	
	Zeigt Warnungen und Fehler an.
	Zeigt Warnung- und Fehlerkodierung an. Die Codes sind im Kapitel 3-9 detailliert aufgelistet.
Stummschaltung	
	Zeigt an, dass der USV-Alarm ausgeschaltet ist.
Ausgangs & Akkuspannung	
	Zeigt die Ausgangsspannung, Frequenz oder Akkuspannung an. Vac: Ausgangsspannung, Vdc: Akkuspannung, Hz: Frequenz
Last	
	Zeigt die Last in 0-25%, 26-50%, 51-75% und 76-100% an.
	Zeigt Überlastung an.
	Zeigt einen Kurzschluss an USV oder angeschlossenen Geräten an.
Betriebsmodus	
	Zeigt an, dass die USV an das Stromnetz angeschlossen ist.
	Zeigt an, dass der Akku einwandfrei funktioniert.
	Zeigt an, dass der Bypass einwandfrei funktioniert.
	Zeigt an, dass der ECO-Modus aktiviert ist.
	Zeigt an, dass der Inverterstromkreis einwandfrei funktioniert.
	Zeigt an, dass der Ausgang einwandfrei funktioniert.

EN

Akku	
	Zeigt den Ladungszustand des Akkus in 0-25%, 26-50%, 51-75%, und 76-100% an.
BATT. FAULT	Zeigt einen Akkudefekt an.
LOW BATT.	Zeigt einen niedrigen Ladezustand und Spannung des Akkus an.
Eingangss- & Akkuspannung	
	Zeigt die Eingangsspannung oder -frequenz oder die Akkuspannung an. Vac: Eingangsspannung, Vdc: Akkuspannung, Hz: Eingangsfrequenz

3-3. Akustischer Alarm

Description	Buzzer status	Muted
UPS status		
Bypassmodus	Ertönt alle 2 Minuten	Ja
Akkumodus	Ertönt alle 4 Sekunden	
Fehler	Kontinuierlicher Ton	
Warnungen		
Überlastung	Ertönt zweimal jede Sekunde	Nein
Andere	Ertönt jede Sekunde	

3-4. Single UPS Operation

1. Turn on the UPS with utility power supply (in AC mode)

- 1) After power supply is connected correctly, set the breaker of the battery pack at "ON" position (the step only available for long-run model). Then set the line input breaker at "ON" position (for dual input unit, also set the bypass input breaker at "ON"). At this time the fan is running and the UPS enter to power on mode for initialization, several seconds later, UPS operates in Bypass mode and supplies power to the loads via the bypass.

NOTE: When UPS is in Bypass mode, the output voltage will directly power from utility after you switch on the input breaker. In Bypass mode, the load is not protected by UPS. To protect your precious devices, you should turn on the UPS. Refer to next step.

- 2) Press and hold the "ON" button for 0.5s to turn on the UPS and the buzzer will beep once.
- 3) A few seconds later, the UPS will enter to AC mode. If the utility power is abnormal, the UPS will operate in Battery mode without interruption.

NOTE: When the UPS is running out battery, it will shut down automatically at Battery mode. When the utility power is restored, the UPS will auto restart in AC mode.

2. Turn on the UPS without utility power supply (in Battery mode)

- 1) Make sure that the breaker of the battery pack is at "ON" position (only for long-run model).
- 2) Press the "ON" button to set up the power supply for the UPS, UPS will enter to power on mode. After initialization UPS will enter to No Output mode, then Press and hold the "ON" button for 0.5s to turn on the UPS, and the buzzer will beep once.
- 3) A few seconds later, the UPS will be turned on and enter to Battery mode.

3. Connect devices to UPS

After the UPS is turned on, you can connect devices to the UPS.

- 1) Turn on the UPS first and then switch on the devices one by one, the LCD panel will display total load level.
- 2) If it is necessary to connect the inductive loads such as a printer, the in-rush current should be calculated carefully to see if it meets the capacity of the UPS, because the power consumption of this kind of loads is too big.
- 3) If the UPS is overload, the buzzer will beep twice every second.
- 4) When the UPS is overload, please remove some loads immediately. It is recommended to have the total loads connected to the UPS less than 80% of its nominal power capacity to prevent overload for system safety.
- 5) If the overload time is over acceptable time listed in spec at AC mode, the UPS will automatically transfer to Bypass mode. After the overload is removed, it will return to AC mode. If the overload time is over acceptable time listed in spec at Battery mode, the UPS will become fault status. At this time, if bypass is enabled, the UPS will power to the load via bypass. If bypass function is disabled or the input power is not within bypass acceptable range, it will cut off output directly.

4. Charge the batteries

- 1) After the UPS is connected to the utility power, the charger will charge the batteries automatically except in Battery mode or during battery self-test.
- 2) Suggest to charge batteries at least 10 hours before use. Otherwise, the backup time may be shorter than expected time.
- 3) Make sure the battery numbers setting on the control board (Please refer to the section 3-4-12 for detailed setting) is consistent to real connection.

5. Battery mode operation

- 1) When the UPS is in Battery mode, the buzzer will beep according to different battery capacity. If the battery capacity is more than 25%, the buzzer will beep once every 4 seconds; If the battery voltage drops to the alarm level, the buzzer will beep quickly (once every sec) to remind users that the battery is at low level and the UPS will shut down automatically soon. Users could switch off some non-critical loads to disable the shutdown alarm and prolong the backup time. If there is no more load to be switched off at that time, you have to shut down all loads as soon as possible to protect the devices or save data. Otherwise, there is a risk of data loss or load failure.
- 2) In Battery mode, if buzzer sound annoys, users can press the Mute button to disable the buzzer.
- 3) The backup time of the long-run model depends on the external battery capacity.
- 4) The backup time may vary from different environment temperature and load type.
- 5) When setting backup time for 16.5 hours (default value from LCD panel), after discharging 16.5 hours, UPS will shut down automatically to protect the battery. This battery discharge protection can be enabled or disabled through LCD panel control. (Refer to 3-7 LCD setting section)

6. Test the batteries

- 1) If you need to check the battery status when the UPS is running in AC mode/CVCF mode, you could press the "Test" button to let the UPS do battery self-test.
- 2) Users also can set battery self-test through monitoring software.

7. Turn off the UPS with utility power supply in AC mode

- 1) Turn off the inverter of the UPS by pressing "OFF" button for at least 0.5s, and then the buzzer will beep once. The UPS will turn into Bypass mode.

NOTE 1: If the UPS has been set to enable the bypass output, it will bypass voltage from utility power to output terminal even though you have turned off the UPS (inverter).

NOTE 2: After turning off the UPS, please be aware that the UPS is working at Bypass mode and there is risk of power loss for connected devices.

- 2) In Bypass mode, output voltage of the UPS is still present. In order to cut off the output, switch off the line input breaker(for dual input unit, also switch off the bypass line breaker). A few seconds later, there is no display shown on the display panel and UPS is complete off.

8. Turn off the UPS without utility power supply in Battery mode

- 1) Turn off the UPS by pressing "OFF" button for at least 0.5s, and then the buzzer will beep once.
- 2) Then UPS will cut off power to output and there is no display shown on the display panel.

9. Mute the buzzer

- 1) To mute the buzzer, please press the "Mute" button for at least 0.5s. If you press it again after the buzzer is muted, the buzzer will beep again.
- 2) Some warning alarms can't be muted unless the error is fixed. Please refer to section 3-3 for the details.

10. Operation in warning status

- 1) When Fault LED flashes and the buzzer beeps once every second, it means that there are some problems for UPS operation. Users can get the warning indicator from LCD panel. Please check the trouble shooting table in chapter 4 for details.
- 2) Some warning alarms can't be muted unless the error is fixed. Please refer to section 3-3 for the details.

11. Operation in Fault mode

- 1) When Fault LED illuminates and the buzzer beeps continuously, it means that there is a fatal error in the UPS. Users can get the fault code from display panel. Please check the trouble shooting table in chapter 4 for details.
- 2) Please check the loads, wiring, ventilation, utility, battery and so on after the fault occurs. Don't try to turn on the UPS again before solving the problems. If the problems can't be fixed, please contact the distributor or service people immediately.
- 3) For emergency case, please cut off the connection from utility, external battery, and output immediately to avoid more risk or danger.

12. Operation of changing battery numbers

- 1) This operation is only available for professional or qualified technicians.
- 2) Turn off the UPS. If the load couldn't be cut off, you should remove the cover of maintenance bypass switch on the rear panel and turn the maintenance switch to "BPS" position first.
- 3) Switch off the line input breaker(for dual input unit, also switch off the bypass input breaker), and switch off the battery breaker (only available for long-run model).
- 4) Remove the cabinet cover, and disconnect battery wire for standard model. Then modify the jumper of JS3 on the control board to set the battery numbers as following table.

Battery Number in series	JS3			
	pin1 & pin2	pin3 & pin4	Pin5 & pin6	pin7 & pin8
18	1	0	0	X
19	0	1	0	X
20	0	0	1	X

Note:1 = connect with jumper; 0 = no jumper; x = the pins are for other functions.

- 5) Modify the battery pack for the setting number carefully. After complete it, put the cover back, switch on the battery breaker for long-run model.

- 6) Switch on the line input breaker(for dual input unit, also switch on the bypass input breaker) and the UPS will enter Bypass mode. If the UPS is in maintenance Bypass mode, turn the maintenance switch to "UPS" position and then turn on the UPS.

3-5. Parallel Operation

1. Parallel system initial startup

First of all, please make sure all of the UPSs are parallel models and have the same configuration.

- 1) Turn on each UPS to AC mode respectively (Refer to section 3-4(1)). Then, measure the inverter output voltage of each phase for each UPS to check if the inverter voltage difference between actual output and setting value is less than 1.5V (typical 1V) with multimeter. If the difference is more than 1.5V, please calibrate the voltage by configuring inverter voltage adjustment (Refer to Program 15, 16 and 17, section 3-7) in LCD setting. If voltage difference remains more than 1.5V after calibration, please contact your local distributor or service center for help.
- 2) Calibrate the output voltage measurement by configuring output voltage calibration (Refer to Program 18, 19, and 20, section 3-7) in LCD setting to make sure the difference between real output voltage and detected value of UPS is less than 1V.
- 3) Turn off each UPS (Refer to section 3-4(7.)). Then, follow the wiring procedure in section 2-4.
- 4) Remove the cover of parallel share current cable port on the UPS, connect each UPS one by one with the parallel cable and share current cable, and then screw the cover back.
- 5) **Turn on the parallel system in AC mode:**
 - a) Turn on the line input breaker of each UPS(for dual input, also turn on bypass input breaker). After all UPSs enter to bypass mode, measure the output voltage between two UPS for the same phase to make sure the phase sequence is correct . If these two voltage differences are near to zero, that means all connections are correct. Otherwise, please check if the wirings are connected correctly.
 - b) Turn on the output breaker of each UPS.
 - c) Turn on each UPS in turns. After a while, the UPSs will enter to AC mode synchronously and then, the parallel system is completed.
- 6) **Turn on the parallel system in Battery mode:**
 - a) Turn on the battery breaker (only available in long-run model) and output breaker of each UPS.
NOTE: It's not allowed to share one battery pack for long-run UPSs in parallel system. Each UPS should be connected to its battery pack.
 - b) Turn on any UPS. A few seconds later, the UPS will enter to battery mode.
 - c) Then, turn on another UPS. A few seconds later, the UPS will enter to battery mode and add to the parallel system.
 - d) If you have the third UPS, follow the same procedure of c). Then, the parallel system is complete.

If more detailed information is needed, please contact supplier or service center for parallel operation instruction.

2. Add one new unit into the parallel system

- 1) You can not add one new unit into the parallel system when whole system is running. You must cut off the load and shutdown the system.
- 2) Make sure all of the UPS are the parallel models, and follow the wiring refer to section 2-4.
- 3) Install the new parallel system refers to the previous section.

3. Remove one unit from the parallel system

There are two methods to remove one unit from the parallel system:

First method:

- 1) Press the "OFF" key twice and each time should be lasted for more than 0.5s. Then, the UPS will enter into bypass mode or no output mode without output.
- 2) Turn off the output breaker of this unit, and then turn off the input breaker of this unit.
- 3) After it shuts down, you can turn off the battery breaker (for long-run model) and remove the parallel and share current cables. And then remove the unit from the parallel system.

Second method:

- 1) If the bypass is abnormal, you can not remove the UPS without interruption. You must cut off the load and shut down the system first.
- 2) Make sure the bypass setting is enabled in each UPS and then turn off the running system. All UPSs will transfer to Bypass mode. Remove all the maintenance bypass covers and set the maintenance switches from "UPS" to "BPS". Turn off all the input breakers and battery breakers in parallel system.
- 3) Turn off the output breaker and remove the parallel cable and share current cable of the UPS which you want to remove. Then, remove it from parallel system.
- 4) Turn on the input breaker of the remaining UPS and the system will transfer to Bypass mode. Set the maintenance switches from "BPS" to "UPS" and put the maintenance bypass covers back.
- 5) Turn on the remaining UPS according to the previous section.



Warning: (Only for the parallel system)


- Before turning on the parallel system to activate inverter, make sure that all unit's maintenance switch at the same position.
- When parallel system is turned on to work through inverter, please do not operate the maintenance switch of any unit.

3-6. LCD-Display Index der Formulierungen

Abkürzung	Anzeige	Bedeutung
ENA	ENA	Aktivieren
DIS	DIS	Deaktivieren
ATO	ATO	Auto
BAT	BAT	Akku
NCF	NCF	Normal Modus
CF	CF	Konverter-Modus
SUB	SUB	Subtract
ADD	ADD	Hintufügen
ON	ON	An
OFF	OFF	Aus
FBD	FBD	Nicht erlaubt
OPN	OPN	Erlaubt
RES	RES	Reserviert
N.L	NL	Neutral Leitungsverlust
CHE	CHE	Prüfen

OP.V	<i>OPV</i>	Ausgangsspannung
PAR	<i>PAR</i>	Parallel, 001 bezeichnet die erste USV
AN	<i>AN</i>	Die erste Phase
BN	<i>bN</i>	Die zweite Phase
CN	<i>CN</i>	Die dritte Phase
AB	<i>Ab</i>	Die erste Zeile
BC	<i>bC</i>	Die zweite Zeile
CA	<i>CA</i>	Die dritte Zeile

3-7. USV Einstellungen

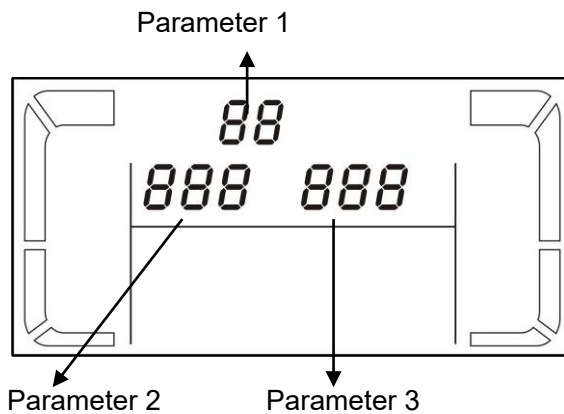

Es können drei Parameter eingestellt werden.

Parameter 1: Es können 9 Programme eingestellt werden. Siehe Tabelle unten.

Parameter 2 und Parameter 3 geben die Einstelloptionen oder Werte für jedes Programm wieder.

Programs available list for parameter 1:

Code	Beschreibung	Bypass / Kein Ausgang Modus	AC Modus	ECO Modus	Konwerter Modus	Akkusmodus	Akkutest
01	Ausgangsspannung	Y*					
02	Ausgangsfrequenz	Y					
03	Spannungsbereich für Bypass	Y					
04	Frequenzbereich für Bypass	Y					
05	ECO-Modus aktivieren / deaktivieren	Y					
06	Spannungsbereich für ECO-Modus	Y					
07	Frequenzbereich für ECO-Modus	Y					
08	Bypass-Modus-Einstellung	Y	Y				
09	Maximale Batterieentladung Zeiteinstellung	Y	Y	Y	Y	Y	Y

10	reserviert	Für zukünftige Optionen reserviert					
11	reserviert	Für zukünftige Optionen reserviert					
12	Neutral-Loss-Detection	Y	Y	Y	Y	Y	Y
13	Batteriespannung Kalibrierung	Y	Y	Y	Y	Y	Y
14	Ladegerät Spannungsanpassung	Y	Y	Y	Y	Y	Y
15	Wechselrichter A Spannungsanpassung		Y		Y	Y	
16	Wechselrichter B Spannungsanpassung		Y		Y	Y	
17	Wechselrichter C Spannungsanpassung		Y		Y	Y	
18	Ausgang A Spannungskalibrierung		Y		Y	Y	
19	Ausgang B Spannungskalibrierung		Y		Y	Y	
20	Ausgang C Spannungskalibrierung		Y		Y	Y	

*Y means that this program can be set in this mode.

Note: All parameter settings will be saved only when UPS shuts down normally with internal or external battery connection. (Normal UPS shutdown means turning off input breaker in bypass/no output mode).

● 01: Ausgangsspannungseinstellung

Interface	Einstellung
	Parameter 3: Ausgangsspannung Bei den Modellen 200/208/220/230/240 VAC können folgende Ausgangsspannung eingestellt werden: 200: Ausgangsspannung 200V Wechselstrom 208: Ausgangsspannung 208V Wechselstrom 220: Ausgangsspannung 220V Wechselstrom 230: Ausgangsspannung 230V Wechselstrom 240: Ausgangsspannung 240V Wechselstrom

● 02: Frequenzumwandler

Interface	Einstellung
	Parameter 2: Output Frequency Setting the output frequency. You may choose following three options in parameter 2: 50.0Hz: Ausgangsfrequenz 50Hz 60.0Hz: Ausgangsfrequenz 60Hz ATO: If selected, output frequency will be decided according to the latest normal utility frequency. If it is from 46Hz to 54Hz, the output frequency will be 50.0Hz. If it is from 56Hz to 64Hz, the output frequency will be 60.0Hz. ATO is default setting. Parameter 3: Frequency mode Setting output frequency at CVCF mode or not CVCF mode. You

	<p>may choose following two options in parameter 3:</p> <p>CF: Setting UPS to CVCF mode. If selected, the output frequency will be fixed at 50Hz or 60Hz according to setting in parameter 2. The input frequency could be from 46Hz to 64Hz.</p> <p>NCF: Setting UPS to normal mode (not CVCF mode). If selected, the output frequency will synchronize with the input frequency within 46~54 Hz at 50Hz or within 56~64 Hz at 60Hz according to setting in parameter 2. If 50 Hz selected in parameter 2, UPS will transfer to battery mode when input frequency is not within 46~54 Hz. If 60Hz selected in parameter 2, UPS will transfer to battery mode when input frequency is not within 56~64 Hz.</p> <p>*If Parameter 2 is ATO, the Parameter 3 will show the current frequency.</p>
<p style="text-align: center;">ATO</p>	

Note: For single unit, it will have bypass output for a couple of seconds after the unit is powered on. Therefore, to avoid damage on connected devices, it's strongly suggested to add an additional Output relay board for CVCF application.

● **03: Voltage range for bypass**

Interface	Setting
	<p>Parameter 2: Set the acceptable low voltage for bypass. Setting range is from 110V to 209V and the default value is 110V.</p> <p>Parameter 3: Set the acceptable high voltage for bypass. Setting range is from 231V to 276V and the default value is 264V.</p>

● **04: Frequency range for bypass**

Interface	Setting
	<p>Parameter 2: Set the acceptable low frequency for bypass. 50 Hz system: Setting range is from 46.0Hz to 49.0Hz. 60 Hz system: Setting range is from 56.0Hz to 59.0Hz. The default value is 46.0Hz/56.0Hz.</p> <p>Parameter 3: Set the acceptable high frequency for bypass. 50 Hz: Setting range is from 51.0Hz to 54.0 Hz. 60 Hz: Setting range is from 61.0Hz to 64.0Hz. The default value is 54.0Hz/64.0Hz.</p>

● **05: ECO mode enable/disable**

Interface	Setting
	<p>Parameter 3: Enable or disable ECO function. You may choose following two options:</p> <p>DIS: disable ECO function</p> <p>ENA: enable ECO function</p> <p>If ECO function is disabled, voltage range and frequency range for ECO mode still can be set, but it is meaningless unless the ECO function is enabled.</p>

● **06: Voltage range for ECO mode**

Interface	Setting



Parameter 2: Low voltage point in ECO mode. The setting range is from -5% to -10% of the nominal voltage.
Parameter 3: High voltage point in ECO mode. The setting range is from +5% to +10% of the nominal voltage.

● **07: Frequency range for ECO mode**

Interface	Setting
	<p>Parameter 2: Set low voltage point for ECO mode. 50 Hz system: Setting range is from 46.0Hz to 48.0Hz. 60 Hz system: Setting range is from 56.0Hz to 58.0Hz. The default value is 48.0Hz/58.0Hz.</p> <p>Parameter 3: Set high voltage point for ECO mode. 50 Hz: Setting range is from 52.0Hz to 54.0 Hz. 60 Hz: Setting range is from 62.0Hz to 64.0Hz. The default value is 52.0Hz/62.0Hz.</p>

● **08: Bypass mode setting**

Interface	Setting
	<p>Parameter 2: OPN: Bypass allowed. When selected, UPS will run at Bypass mode depending on bypass enabled/disabled setting. FBD: Bypass not allowed. When selected, it's not allowed for running in Bypass mode under any situations.</p> <p>Parameter 3: ENA: Bypass enabled. When selected, Bypass mode is activated. DIS: Bypass disabled. When selected, automatic bypass is acceptable, but manual bypass is not allowed. Manual bypass means users manually operate UPS for Bypass mode. For example, pressing OFF button in AC mode to turn into Bypass mode.</p>

● **09: Maximum battery discharge time setting**

Interface	Setting
	<p>Parameter 3: 000~999: Set the maximum discharge time from 0 min to 999 min. UPS will shut down to protect battery if the discharge time arrives before the battery is under voltage. The default value is 990 min. DIS: Disable battery discharge protection and backup time will depend on battery capacity.</p>

● **10: Reserved**

Interface	Setting
	<p>Reserve for future options.</p>

● **11: Reserved**

Interface	Setting
	Reserve for future options.

● **12: Neutral loss detection**

Interface	Setting
	<p>Parameter 2: N.L: Indicates neutral loss detection function.</p> <p>Parameter 3: DIS: Disable the neutral loss detection function. The UPS will not detect the neutral loss or not. ATO: The UPS will automatically detect the neutral is lost or not. If neutral loss is detected, an alarm will be generated. If the UPS is turned on, it will transfer to battery mode. When neutral is restored and detected, the alarm will be muted automatically and the UPS will go back to normal mode automatically. CHE: The UPS will automatically detect the neutral loss. If neutral loss is detected, an alarm will be generated. If the UPS is turned on, it will transfer to battery mode. When neutral is restored, the alarm will NOT be muted automatically and the UPS will NOT go back to normal mode automatically. Here, you must mute the alarm and make the UPS go back to normal mode manually. The operation is: Firstly, enter this menu and press the "Enter" key to make the "CHE" flash. Secondly, press the "Enter" key again to activate the neutral detection (check). If neutral is detected, the alarm will be muted and the UPS will go back to normal mode. If neutral is not detected, the UPS will continue alarming and stay on the latest status until the neutral is detected well at next manual checking operation. CHE is default setting.</p>

● **13: Battery voltage calibration**

Interface	Setting
	<p>Parameter 2: Select "Add" or "Sub" function to adjust battery voltage to real figure.</p> <p>Parameter 3: the voltage range is from 0V to 9.9V and the default value is 0V.</p>

● **14: Charger voltage adjustment**

Interface	Setting
	<p>Parameter 2: you may choose Add or Sub to adjust charger voltage</p> <p>Parameter 3: the voltage range is from 0V to 9.9V and the default value is 0V.</p> <p>NOTE: *Before making voltage adjustment, be sure to disconnect all batteries first to get the accurate charger voltage. * Any modification should be suitable to battery specifications.</p>

● **15: Inverter A voltage adjustment**

Interface	Setting
	<p>Parameter 2: you may choose Add or Sub to adjust inverter A voltage.</p> <p>Parameter 3: the voltage range is from 0V to 9.9V and the default value is 0V.</p>

● **16: Inverter B voltage adjustment**

Interface	Setting
	<p>Parameter 2: you may choose Add or Sub to adjust inverter B voltage*.</p> <p>Parameter 3: the voltage range is from 0V to 9.9V and the default value is 0V.</p> <p>*It will display number 1 under Add or Sub to represent inverter B voltage.</p>

● **17: Inverter C voltage adjustment**

Interface	Setting
	<p>Parameter 2: you may choose Add or Sub to adjust inverter C voltage*.</p> <p>Parameter 3: the voltage range is from 0V to 9.9V, the default value is 0V.</p> <p>*It will display number 2 under Add or Sub to represent inverter C voltage.</p>


● **18: Output A voltage calibration**

Interface	Setting
	<p>Parameter 2: it always shows OP.V as output voltage.</p> <p>Parameter 3: it shows the internal measurement value of the output A voltage, and you can calibrate it by pressing Up or Down according to the measurement from an external voltage meter. The calibration result will be effective by pressing Enter. The calibration range is limited within +/-9V. This function is normally used for parallel operation.</p>

● **19: Output B voltage calibration**

Interface	Setting
	<p>Parameter 2: it always shows OP.V as output voltage*.</p> <p>Parameter 3: it shows the internal measurement value of the output B voltage, and you can calibrate it by pressing Up or Down according to the measurement from an external voltage meter. The calibration result will be effective by pressing Enter. The calibration range is limited within +/-9V. This function is normally used for parallel operation.</p> <p>*It will display number 1 under OPV to represent the output B voltage.</p>

● **20: Output C voltage calibration**

Interface	Setting
	<p>Parameter 2: it always shows OP.V as output voltage.</p> <p>Parameter 3: it shows the internal measurement value of the output C voltage, and you can calibrate it by pressing Up or Down according to the measurement from an external voltage meter. The calibration result will be effective by pressing Enter. The calibration range is limited within +/-9V. This function is normally used for parallel operation.</p> <p>*It will display number 2 under OPU to represent the output C voltage.</p>


EN

3-8. Operating Mode/Status Description

Following table shows LCD display for operating modes and status.

(1) If the UPS is in normal operation, it will show seven screens one by one, which represents 3 phase input voltages (An, bn, Cn), 3 line input voltages (Ab, bC, CA) and frequency in turns.

(2) If parallel UPS systems are successfully set up, it will show one more screen with "PAR" in parameter 2 and assigned number in parameter 3 as below parallel screen diagram. The master UPS will be default assigned as "001" and slave UPSs will be assigned as either "002" or "003". The assigned numbers may be changed dynamically in the operation;

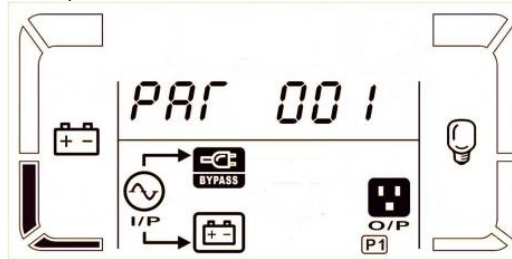

Parallel screen



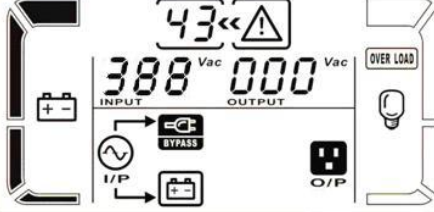
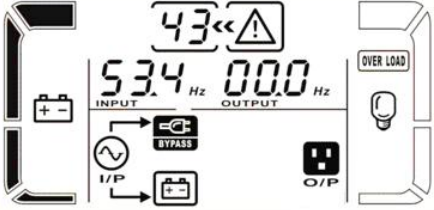
Operating mode/status		
UPS Power On	Description	When UPS is powered on, it will enter into this mode for a few seconds as initializing the CPU and system.
	LCD display	
No-output mode	description	When bypass voltage/frequency is out of acceptable range or bypass is disabled (or forbidden), UPS will enter into no-output mode if powering on or turning off the UPS. It means the UPS has no output. Alarm beeps every two minutes.
	LCD display	

AC mode	Description	When the input voltage is within acceptable range, UPS will provide pure and stable AC power to output. The UPS will also charge the battery at AC mode.	
	LCD display		
ECO mode	Description	When the input voltage is within voltage regulation range and ECO mode is enabled, UPS will bypass voltage to output for energy saving.	
	LCD display		

CVCF mode	Description	When the output frequency is set to "CF", the inverter will output constant frequency (50 Hz or 60 Hz). At this mode, the UPS will have no bypass output but still charge battery.	
	LCD display		

Battery mode	Description	When the input voltage/frequency is beyond the acceptable range or power failure, UPS will backup power from battery and alarm will beep every 4 seconds.	
	LCD display		
Bypass mode	Description	When input voltage is within acceptable range and bypass is enabled, turn off the UPS and it will enter Bypass mode. Alarm beeps every two minutes.	
	LCD display		

<p>Battery Test</p>	<p>Description</p>	<p>When UPS is in AC mode or CVCF mode, press "Test" key for more than 0.5s. Then, the UPS will beep once and start "Battery Test". The line between I/P and inverter icons will blink to remind users. This operation is used to check the battery status.</p>	
	<p>LCD display</p>		
<p>Warning status</p>	<p>Description</p>	<p>If some errors occur in the UPS (but it is still running normally), it will show one more screen to represent the warning situation. In the warning screen, the icon will be flashing, and it can show up to 3 error codes and each code indicates one error. You can find the code meaning in the warning code table.</p>	
	<p>LCD display</p>		

Fault status	Description	When UPS has fault happened, the inverter will be blocked. It will display fault code in screen, and the icon  will light up. You can find the code meaning in the fault code table.	
LCD display			
			

3-9. Fault Code

Fault code	Fault event	Icon	Fault code	Fault event	Icon
01	Bus start failure	None	1A	Inverter A negative power fault	None
02	Bus over	None	1B	Inverter B negative power fault	None
03	Bus under	None	1C	Inverter C negative power fault	None
04	Bus unbalance	None	21	Battery SCR short circuited	None
06	Converter over current	None	24	Inverter relay short circuited	None
11	Inverter soft start failure	None	29	Battery fuse broken in Battery mode	None
12	High inverter voltage	None	31	Parallel communication failure	None
13	Low inverter voltage	None	36	Parallel output current unbalance	None
14	Inverter A output(line to neutral) short circuited		41	Over temperature	None
15	Inverter B output(line to neutral) short circuited		42	DSP communication failure	None
16	Inverter C output(line to neutral) short circuited		43	Overload	
17	Inverter A-B output (line to line) short circuited		46	Incorrect UPS setting	None
18	Inverter B-C output (line to line) short circuited		47	MCU communication failure	None
19	Inverter C-A output (line to line) short circuited		48	Two DSP firmware versions are incompatible.	None
			49	Input and output phases are incompatible	None

3-10.Warning Indicator

Warning	Icon (flashing)	Alarm
Battery low		Beeping every second
Overload		Beeping twice every second
Battery unconnected		Beeping every second
Over charge		Beeping every second
EPO enable		Beeping every second
Fan failure/Over temperature		Beeping every second
Charger failure		Beeping every second
I/P fuse broken		Beeping every second
Overload 3 times in 30min		Beeping every second




3-11.Warning Code




Warning code	Warning event	Warning code	Warning event
01	Battery unconnected	10	L1 IP fuse broken*
02	IP Neutral loss	11	L2 IP fuse broken*
04	IP phase abnormal	12	L3 IP fuse broken*
05	Bypass phase abnormal	21	Line situations are different in parallel system
07	Over charge	22	Bypass situations are different in parallel system
08	Low battery	33	Locked in bypass after overload 3 times in 30 minutes
09	Overload	34	Converter current unbalance
0A	Fan failure	35	Battery fuse broken
0B	EPO enable	3A	Cover of maintain switch is open
0D	Over temperature	3C	Utility extremely unbalanced
0E	Charger failure	3D	Bypass unstable

* These alarms are only for the single input unit.

4. Trouble Shooting

If the UPS system does not operate correctly, please solve the problem by using the table below.

Symptom	Possible cause	Remedy
No indication and alarm in the front display panel even though the mains is normal.	The AC input power is not connected well.	Check if input cable firmly connected to the mains.
The icon  and the warning code EP flash on LCD display and alarm beeps every second.	EPO function is activated. At this time, the EPO switch is in "OFF" status or the jumper is open.	Set the circuit in closed position to disable the EPO function.
The icon  and BATT. FAULT flash on LCD display and alarm beeps every second.	The external or internal battery is incorrectly connected.	Check if all batteries are connected well.
The icon  and OVER LOAD flash on LCD display and alarm beeps twice every second.	UPS is overload.	Remove excess loads from UPS output.
	UPS is overloaded. Devices connected to the UPS are fed directly by the electrical network via the Bypass.	Remove excess loads from UPS output.
	After repetitive overloads, the UPS is locked in the Bypass mode. Connected devices are fed directly by the mains.	Remove excess loads from UPS output first. Then shut down the UPS and restart it.
Fault code is shown as 43. The icon OVER LOAD lights on LCD display and alarm beeps continuously.	UPS is overload too long and becomes fault. Then UPS shut down automatically.	Remove excess loads from UPS output and restart it.
Fault code is shown as 14, the icon SHORT lights on LCD display, and alarm beeps continuously.	The UPS shut down automatically because short circuit occurs on the UPS output.	Check output wiring and if connected devices are in short circuit status.

Other fault codes are shown on LCD display and alarm beeps continuously.	A UPS internal fault has occurred.	Contact your dealer
Battery backup time is shorter than nominal value	Batteries are not fully charged	Charge the batteries for at least 7 hours and then check capacity. If the problem still persists, consult your dealer.
	Batteries defect	Contact your dealer to replace the battery.
The icon  and  flash on LCD display and alarm beeps every second.	Fan is locked or not working; or the UPS temperature is too high.	Check fans and notify dealer.
Symptom	Possible cause	Remedy
The warning code 02 is shown, the icon  flashes on LCD display, and alarm beeps every second.	The input neutral wire is disconnected.	Check and correct the input neutral connection. If the connection is ok and the alarm is still displaying, please refer to the LCD setting section, to enter the neutral loss check menu, to see if the parameter3 is "CHE", if it is, please press the "Enter" key firstly to make the "CHE" flash and press the "Enter" key secondly to make the UPS clear the alarm. If the warning still exists, please check input fuses of L2 and L3.
	The L2 or L3 input fuse is broken.	Replace the fuse.


5. Storage and Maintenance


5-1. Storage


Before storing, charge the UPS at least 7 hours. Store the UPS covered and upright in a cool, dry location. During storage, recharge the battery in accordance with the following table:


Storage Temperature	Recharge Frequency	Charging Duration
-25°C - 40°C	Every 3 months	1-2 hours
40°C - 45°C	Every 2 months	1-2 hours


5-2. Maintenance


 The UPS system operates with hazardous voltages. Repairs may be carried out only by qualified maintenance personnel.


 Even after the unit is disconnected from the mains, components inside the UPS system are still connected to the battery packs which are potentially dangerous.


 Before carrying out any kind of service and/or maintenance, disconnect the batteries and verify that no current is present and no hazardous voltage exists in the terminals of high capability capacitor such as BUS-capacitors.


 Only persons are adequately familiar with batteries and with the required precautionary measures may replace batteries and supervise operations. Unauthorized persons must be kept well away from the batteries.


 Verify that no voltage between the battery terminals and the ground is present before maintenance or repair. In this product, the battery circuit is not isolated from the input voltage. Hazardous voltages may occur between the battery terminals and the ground.

 Batteries may cause electric shock and have a high short-circuit current. Please remove all wristwatches, rings and other metal personal objects before maintenance or repair, and only use tools with insulated grips and handles for maintaining or repairing.

 When replace the batteries, install the same number and same type of batteries.

 Do not attempt to dispose of batteries by burning them. This could cause battery explosion. The batteries must be rightly deposed according to local regulation.

 Do not open or destroy batteries. Escaping electrolyte can cause injury to the skin and eyes. It may be toxic.

 Please replace the fuse only with the same type and amperage in order to avoid fire hazards.

 Do not disassemble the UPS system.

6. Specifications

MODEL		10000	10000L	15000	15000L	20000	20000L	30000	30000L
CAPACITY*		10000VA / 9000W		15000VA / 13500W		20000VA / 18000W		30000VA / 27000W	
INPUT									
Voltage Range	Low Line Loss	110 VAC(Ph-N) \pm 3 % at 50% Load 176 VAC(Ph-N) \pm 3 % at 100% Load							
	Low Line Comeback	Low Line Loss Voltage + 10V							
	High Line Loss	300 VAC(L-N) \pm 3 % at 50% Load 276 VAC(L-N) \pm 3 % at 100% Load							
	High Line Comeback	High Line Loss Voltage - 10V							
Frequency Range		46Hz ~ 54 Hz @ 50Hz system 56Hz ~ 64 Hz @ 60Hz system							
Phase		Three phase with Neutral							
Power Factor		\geq 0.99 at 100% Load							
OUTPUT									
Phase		Three Phase with Neutral							
Output voltage		208/220/230/240VAC(Ph-N)							
AC Voltage Regulation		\pm 1%							
Frequency Range (Synchronized Range)		46Hz ~ 54 Hz @ 50Hz system 56Hz ~ 64 Hz @ 60Hz system							
Frequency Range (Batt. Mode)		50 Hz \pm 0.1 Hz or 60Hz \pm 0.1 Hz							
Overload	AC mode	100%~110%: 10min 110%~130%: 1min >130% : 1sec							
	Battery mode	100%~110%: 30sec 110%~130%: 10sec >130% : 1sec							
Current Crest Ratio		3:1 max							
Harmonic Distortion		\leq 2 % @ 100% Linear Load; \leq 5 % @ 100% Non-linear Load							
Transfer Time	Line \leftrightarrow Battery	0 ms							
	Inverter \leftrightarrow Bypass	0 ms (When phase lock fails, <4ms interruption occurs from inverter to bypass)							
	Inverter \leftrightarrow ECO	<10 ms							
EFFICIENCY									
AC mode		> 89%	> 89%	> 89%	> 89%	> 89%	> 89%	> 89%	> 90%
Battery Mode		> 86%	> 88%	> 88%	> 88%	> 87%	> 87%	> 87%	> 89%
BATTERY									
Standard Model	Type	12 V / 9 Ah		12 V / 9 Ah		12 V / 9 Ah		12 V / 9 Ah	
	Numbers	20(18-20 adjustable)		2 x 20(18-20 adjustable)		2 x 20(18-20 adjustable)		3 x 20(18-20 adjustable)	
	Recharge Time	9 hours recover to 90% capacity							
	Charging Current	1.0 A \pm 10% (max.)		2.0 A \pm 10% (max.)		2.0 A \pm 10% (max.)		4.0 A \pm 10% (max.)	
	Charging Voltage	273 VDC \pm 1%							
Long-run Model	Type	Depending on applications							
	Numbers	18 - 20							
	Charging Current	4.0 A \pm 10% (max.)		4.0 A \pm 10% (max.)		4.0 A \pm 10% (max.)		12.0 A \pm 10% (max.)	
	Charging Voltage	273 VDC \pm 1%							
PHYSICAL									
Outline	Dimension, D X W X H mm	815X250 X826	592X250 X826	815X250 X826	592X250 X826	815X250 X826	592X250 X826	815 X 300 X 1000	815X250 X 826
	Net Weight (kgs)	109	38	164	40	164	40	233.5	64
Packaging	Dimension, D X W X H mm	920X380 X1025	700X385 X1071	920X380 X1025	700X385 X1071	920X380 X1025	700X385 X1071	920 X 430 X 1205	920X380 X 1025
	Net Weight (kgs)	127	45	182	47	182	47	250.5	90
ENVIRONMENT									
Operation Temperature		0 ~ 40°C (the battery life will down when > 25°C)							
Operation Humidity		<95 % and non-condensing							
Operation Altitude**		<1000m							
Acoustic Noise Level		Less than 60dB @ 1 Meter			Less than 65dB @ 1 Meter				
MANAGEMENT									
Smart RS-232 or USB		Supports Windows® 2000/2003/XP/Vista/2008, Windows® 7, Linux, Unix, and MAC							
Optional SNMP		Power management from SNMP manager and web browser							

* Derate capacity to 90% when the output voltage is adjusted to 208VAC.

**If the UPS is installed or used in a place where the altitude is above than 1000m, the output power must be derated one percent per 100m.

***Product specifications are subject to change without further notice.